



Refill Instructions - Canon PGI-220 or PGI-520 Canon CLI-221 or CLI-521

Canon
Pixma: iP3600, iP4600, MP540, MP620, MP630, MP980

Items Required
Original Canon PGI-520 or CLI-521 Cartridge,
Drill, Syringe, Filling Tube, Newspaper, sticky tape & Ink

Instructions

1. Seal the ink nozzle on the underside of the cartridge
2. The filler hole is located under the label on top of the cartridge.
3. Peel label back on top of cartridge, or simply drill through the top at the point shown. (fig.1 & fig.2)
4. Assemble syringe and steel filling tube and fill with appropriate colour ink.
5. Insert the steel filling tube into the appropriate filling holes. (See fig.3 for an exact location).
6. SLOWLY Inject ink. When ink overflows from filling hole or starts to leak from print heads cartridge is full. Stop injecting immediately.
IMPORTANT: Clean syringe with water and dry before refilling next colour.
7. After refilling replace label back over hole and seal with adhesive tape or a plug.
8. Leave the cartridge to stand overnight on non-absorbent surface this will ensure no leakage and give the ink time to fully saturate the sponge.
IMPORTANT: DO NOT LEAVE ON TISSUE.
9. Install cartridge and run a priming cycle.

Note: Each time the cartridge is removed from the printer an "empty cartridge" message appears and a blinking amber light will come on, on the printer.

Holding the paper feed button  down for 3-5 sec. will allow you to override the

For more info go to help.jrinkjet.co.uk

The refill method for the PGI-520 and CLI-521 is identical

